

## SPARE PARTS LIST

NO.	DESCRIPTION	QUANTITY
21665Q-1	cable	1
21665Q-2	cable sleeve	1
21665Q-3	output shaft	1
21665Q-4	key 5x13	1
21665Q-5	oil seal	1
21665Q-6	crossing tapping screw ST5x65-F	4
21665Q-7	pushing button spring	1
21665Q-8	pushing button	1
21665Q-9	pushing button fixing screw	1
21665Q-10	shift lever	1
21665Q-11	pin	1
21665Q-12	needle bearing	2
21665Q-13	variable shaft	1
21665Q-14	key 5x45	1
21665Q-15	two gang gear	1
21665Q-16	middle cover	1
21665Q-17	sealling washer	1
21665Q-18	needle bearing	3
21665Q-19	elastic collar 15	1
21665Q-20	big gear	1
21665Q-21	elastic collar 17	
21665Q-22	elastic collar 35	1
21665Q-23	bearing 6003-2Z	1
21665Q-24	cable plate	1
21665Q-25	crossing tapping screw ST4x14	2
21665Q-26	switch(FA2-6/2D-A1-B1-F3)	1
21665Q-27	head housing	1
21665Q-28	main driving shaft	1
21665Q-29	key 4x8	1
21665Q-30	diagonal gear	1
21665Q-31	bearing 608ZZ	1
21665Q-32	tension spring	2

NO.	DESCRIPTION	QUANTITY
21665Q-33	stator subassembly	1
21665Q-34	crossing tapping screw ST5x75-F	2
21665Q-35	dust washer	1
21665Q-36	magnetic ring	1
21665Q-37	motor subassembly	1
21665Q-38	bearing 609ZZ	1
21665Q-39	potentiometer knob	1
21665Q-40	O-ring	1
21665Q-41	potentiometer sleeve	1
21665Q-42	seal pad	
21665Q-43	rotor spring	1
21665Q-44	potentiometer	1
21665Q-45	foregoing handle	1
21665Q-46	crossing tapping screw ST4x20	20
21665Q-47	back handle	1
21665Q-48	lead sleeve	1
21665Q-49	housing	1
21665Q-50	brush hold	2
21665Q-51	carbon brush	2
21665Q-52	brush cover	2
21665Q-53	integrating block	1
21665Q-54	crossing tapping screw ST3x25-F	2
21665Q-55	housing back cover	
21665Q-56	crossing tapping screw ST5x45-F	
21665Q-57	mixer paddle	1
21665Q-58	spanner	4
21665Q-59	chuck wrench	1
21665Q-60	chuck key	1
21665Q-61	chuck screw	1
21665Q-62	chuck	1

**CHUCK KIT**

